

ASCO 7000 (w/XP Power Manager)  
Monitored Points List

Status	Meters
Main Normal	Normal Voltage AB
Main Emergency	Normal Voltage BC
Auxiliary Normal	Normal Voltage CA
Auxiliary Emergency	Emergency Voltage AB
Normal Source Available	Emergency Voltage BC
Emergency Source Available	Emergency Voltage CA
	Frequency
	Voltage AN
	Voltage BN
	Voltage CN
	Voltage AB
	Voltage BC
	Voltage CA
	Current A
	Current B
	Current C
	kWA
	kWB
	kWC
	kVA A
	kVA B
	kVA C
	kVA Total