

Powerware UPS Monitored Points List

Status	Status	Meters
UPS Online	kVA In Lo	Input Volt. AB
Overload Shutdown	kVA In Hi	Input Volt. BC
Summary Alarm	kW In Lo	Input Volt. CA
Inverter Fault	kW In Hi	Frequency In
On Inverter	PF In Lo	Output Volt. AB
On Bypass	PF In Hi	Output Volt. BC
On Battery	kVA Out Lo	Output Volt. CA
Input Volt AB Lo	kVA Out Hi	Frequency Out
Input Volt AB Hi	kW Out Lo	Input Current A
Input Volt BC Lo	kW Out Hi	Input Current B
Input Volt BC Hi	PF Out Lo	Input Current C
Input Volt CA Lo	PF Out Hi	Output Current A
Input Volt CA Hi	Bypass Volt AB Lo	Output Current B
Freq In Lo	Bypass Volt AB Hi	Output Current C
Freq In Hi	Bypass Volt BC Lo	Output Current N
Output Volt AB Lo	Bypass Volt BC Hi	kVA In
Output Volt AB Hi	Bypass Volt CA Lo	kW In
Output Volt BC Lo	Bypass Volt CA Hi	PF In
Output Volt BC Hi	Bypass Freq Lo	kVA Out
Output Volt CA Lo	Bypass Freq Hi	kW Out
Output Volt CA Hi	Batt Volts Lo	PF Out
Freq Out Lo	Batt Volts Hi	Bypass Voltage AB
Freq Out Hi	Batt Current Lo	Bypass Voltage BC
Input Curr A Lo	Batt Current Hi	Bypass Voltage CA
Input Curr A Hi		Bypass Frequency
Input Curr B Lo		Battery Volts
Input Curr B Hi		Battery Current
Input Curr C Lo		
Input Curr C Hi		
Output Curr A Lo		
Output Curr A Hi		
Output Curr B Lo		
Output Curr B Hi		
Output Curr C Lo		
Output Curr C Hi		
Output Curr N Lo		
Output Curr N Hi		